

## **Alignment Points ---- Marine Radio MR F55 & F75**

1. VR100 ---- TX signal meter indicator adjust.
2. VR101 ---- High TX power output adjust.
3. VR102 ---- Low TX power output adjust.
4. VR103 ---- TX modulation limit adjust.
5. VR104 ---- RX signal meter indicator adjust.
6. VR105 ---- Squelch sensitivity adjust.
7. VR108 ---- WX 1050Hz alert tone decoder adjust.
8. IFT L115 ---- VCO voltage adjust. ( in shield can)
9. IFT L116, L117, L119 & L120 ---- RX sensitivity alignment.
10. IFT L123 ---- AF output and distortion adjust.